

apbshar[®]

Save water save life

User Manual

1.



Optimizer

2.



Adopter

3.




Gasket

4.




**Gasket 2
/Spacer**

1

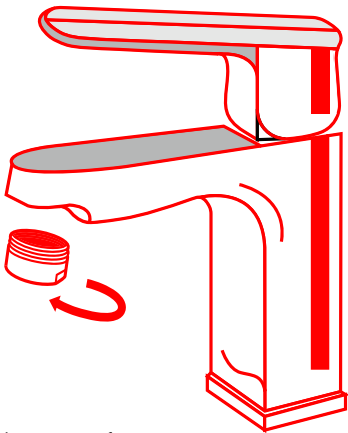

- Unscrew the aerator from faucet with help of pleyer or hand.

2

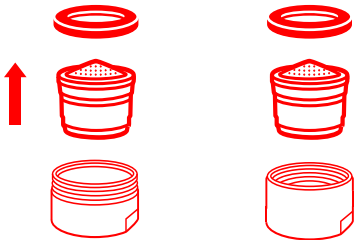

**Aerator with outside threads
are male aerators**

**Aerator with inside threads
are female aerators**

- After unscrewing the aerator, push-out the filter and gasket out of the aerator.
- If needed gently clean both faucet inside and aerator with brush before taking any further Installation steps.

3.1


Steps are for Junior type tap Take-out Optimizer & Gasket from Box



- Gently insert the optimizer in aerator and check if it fits in aerator. If it does not fits skip "3.1" and move to step "3.2".
- Place the gasket-1 on the top of the aerator.

3.2

Steps are for Standard type tap Take-out Optimizer, Adopter & Gasket-2 from Box

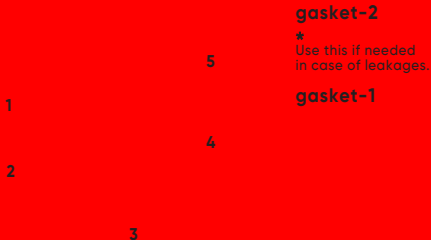


- Insert the adopter in Aerator. If needed fix the adopter with gentle force.
- Now insert the optimizer inside the aerator through the adopter.
- Place the gasket-1 on the top of the aerator.

4



- Gently tighten/screw the aerator with optimizer back to the faucet by using Hands.
- Once the aerator fixes to the faucet use wrench or pleyer to completely tighten/screw the aerator, to avoid any leakages.

Note: Do not use too much force.

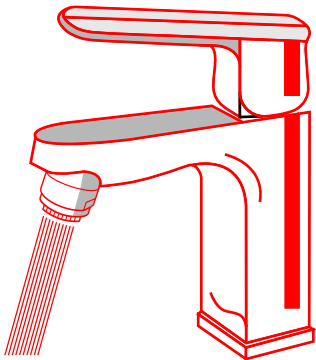

- Now it is ready for use.




- Rotate the outer cylinder to left side in order to increase water span area.



- Rotate the outer cylinder right side to decrease water span area.

- Use any tool or hand to grip the cylinder to twist.
- Twisting cylinder will not increase the flow rate, but it will get more convenient for your needs.

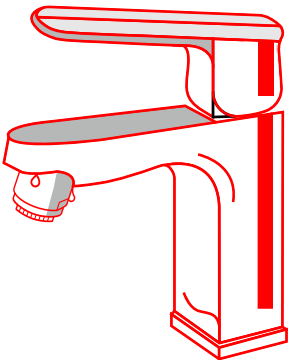

If you observe leakage from the optimizer or aerator follow below instructions:

1. Aerator might not be completely tightened.
Please tighten/screw it more.
2. If nothing works you might need to use both Gaskets provided in the box and repeat step "3.2".